


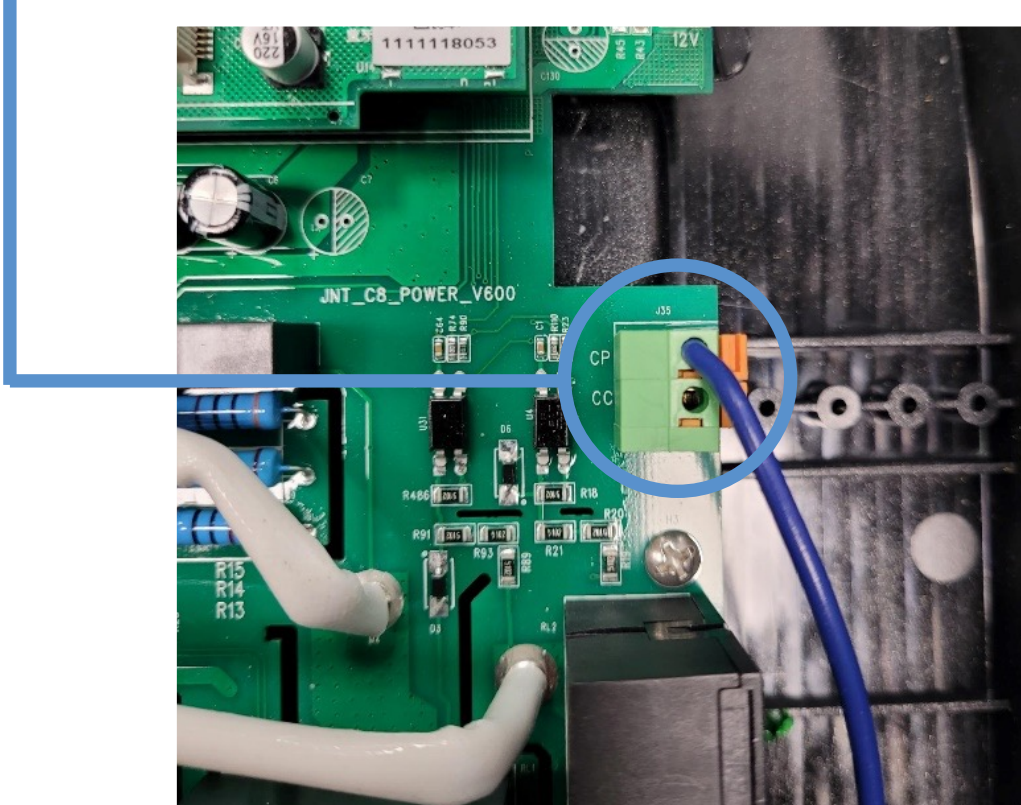

Please ensure that the Control Pilot (CP) wire / 4th wire from the vehicle cable is connected to the CP port on the green terminal port.

To insert the **CP WIRE** into the J35 Terminal, press the orange release tab while inserting the wire.



THIS NOTE APPLIES TO THE FOLLOWING PRODUCTS:



R40|48



P48



P80

Light Efficient Design

847.380.3540 • led-llc.com • sales@led-llc.com